DLYMPUS IMAGING AMERICA

BEFORE YOU BEGIN

Gather these items (box contents)







USB Cable



configuration is unique to one model.



This Quick Start Guide is for both the SP-310 and SP-350. The

camera illustrations shown in this manual are based on the SP-350. The model name is specified when a function or


> **OLYMPUS** Master Software CD-ROM

> > Mode Dial


Strap Eyelet (SP-350 only)

Items not shown: Strap, Advanced Manual (CD-ROM), Basic Manual, warranty card. Contents may vary depending on purchase location.

GET STARTED

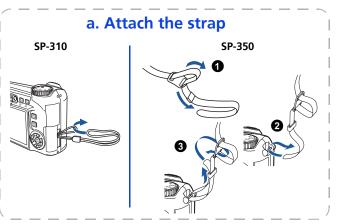

b. Insert the battery

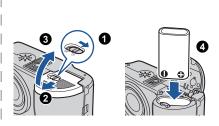

c. Set the date and time


1 Set the mode dial to **AUTO**, and press the **POWER** button to turn the camera on.

2 Press 🕮 to display the top menu, and select [MODE MENU] > [SETUP] > [].

3 Press ∞/∞ to set an item. Press (3/18) to select the next field.




POWER Button



Strap Eyelet Multi-Connector (SP-350 only)

TAKE A PICTURE

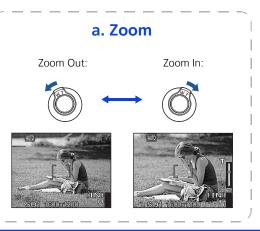

b. Focus

1 Using the monitor, place the AF target mark over your subject.



AF Target Mark

- Press and hold the shutter button halfway to lock the focus.
 - The green lamp indicates the focus and

c. Take the picture

Press the shutter button completely to take the picture.

(Pressed Completely)

REVIEW OR ERASE A PICTURE

a. Press the QUICK VIEW button

• The last picture taken will be displayed. **QUICK VIEW** Button Picture


b. Take a closer look



- Pull the zoom lever toward T or W to zoom in or out. Press 🕮 to return
- to the original size. Press the arrow pad $(\infty/\infty/9/9)$ to scroll around.

Press the **QUICK VIEW** button again to return to shooting mode.

c. To erase a picture

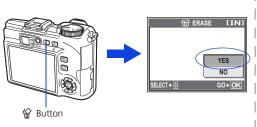

- Display the picture you want to erase.
- Press the 🛣 button.
- 3 Select [YES], and press .
 - The picture is permanently erased.

DC-IN Jack Connector Cover Microphone Flash Card Cover Card Slot Strap Eyelet Self-Timer Lamp/ (SP-310 only) AF Illuminator Zoom Lever Hot Shoe (SP-350 only) Button (Flash Mode) POWER Button ☆ Button (Erase) Orange Lamp **AEL** Button/ Custom Button 品 Button (Print) Viewfinder **DISP./GUIDE** Button Green Lamp **QUICK VIEW** Button Button (OK/MENU) Monitor Arrow Pad $(\infty/\infty/(3/8))$ Speaker Tripod Socket Battery Compartment

CAMERA DIAGRAM

Shutter Button

TRANSFER IMAGES

Arrow Pad

a. Install the software

1 Insert the OLYMPUS Master CD-ROM. **2** Windows: Click the "OLYMPUS Master" button.


Macintosh:

- Double-click the "Installer" 3 Simply follow the on-screen
- instructions. • Remember to register your camera when you install OLYMPUS
 - www.olympusamerica.com/prodreg

OLYMPUS Maste

b. Connect the camera to the computer

Connect the camera and computer using the USB cable (included). The monitor will turn on automatically.



2 Select [PC] on the monitor, and press ...

removable storage drive.




c. Transfer images to the computer

- 1 With the camera now connected, open OLYMPUS Master.
- The [Transfer Images] window is displayed.
- 2 Select the images you want to transfer, and click the [Transfer Images] button.

If the [Transfer Images] window is not displayed automatically:



Click the "From Camera" icon.

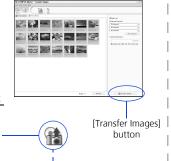

[Transfer Images] window

Cover

© 2005 OLYMPUS IMAGING CORP. Printed in Japan